

SERVICE MANUAL - SUBSYSTEM

EasyVision RAD R4.2V2

Author: V. Auers

In case there are any questions concerning this manual,
please send this LOPAD via fax to 49/(0)40/5078 2481

File: EV_R4_2_V2_lopad_000.doc

List of pages and drawings (LOPAD)

Manual Order No: 4512 984 22362

0.1	(00.0)
1	(00.0)
3.1	(00.0)
1-1...1-14	(00.0)
2-1...2-16	(00.0)
3-1...3-20	(00.0)
4-1...4-51	(00.0)
5-1...5-11	(00.0)
6-1...6-46	(00.0)
7-1...7-3	(00.0)
8-1...8-14	(00.0)
9-1...9-2	(00.0)

Parts List 9896 050 02652		
Z0	(00.0)	A4
Z2-1	(99.0)	A3
Z2-2	(99.0)	A3
Z2-3	(99.0)	A3
Z2-4	(99.0)	A3
Z2-5	(99.0)	A3
Z2-6	(99.0)	A3
Z2-7	(99.0)	A3
Z2-8	(99.0)	A3
Z2-9	(99.0)	A3
Z2-10	(99.0)	A3
Z2-11	(99.0)	A3